
## CREATE

# QUICK GUIDE EN

Thank you for purchasing our window cleaning robot, this "Quick use guide" can help you quickly get familiar with and use this product. For more detailed product information, please read the product manual and warranty certificate.

### **▶** PRODUCT OVERVIEW

- 1. ON / OFF and Start / Pause button
- 2. Status indicator
- 3. Air outlet
- 4. Safety rope mounting hole
- 5. Power line
- 6. Mop holder
- 7. Status indicator
- 8. Upgrading USB port (for factory use)

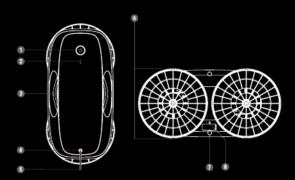

#### PARTS LIST



Window cleaning robot



Remote control



Mops x12



100 ml sprayer



Safety rope



Charging plug



Power adapter



User manual



Quick start guide

#### REMOTE CONTROL



- Pause / Continue
- Move down to the end of the glass \*
- Move up to the end of the glass \*
- Move left to the end of the glass \*
- Move right to the end of the glass \*

- x1) Clean once
- x2) Clean twice
- Continue cleaning and move up from the current position \*
- Continue cleaning and move left from the current position \*
- Continue cleaning and move right from the current position \*

<sup>\*</sup> Press Pause button before using any of these functions.

#### **► INSTALLATION INSTRUCTIONS**



 Ensure the knob of the safety rope is fully tightened to the frame. We recommend to fasten the buckle side of the safety rope to an object which is strong enough and will not be dragged, and reserve a suitable length for the device to work.



Cover the holder with a mop.



Insert the windows cleaner power cord to the end of the adapter and tighten them.

#### OPERATION INSTRUCTIONS AND ATTENTIONS

SAFETY ROPE.

Carefully inspect the safety rope, ensure there's no damage on it and that it is toughly buckled to an object.

INSPECTION OF THE WORKING ENVIRONMENT.

Guarantee the glass is nos excessively wet. Don't use this device under the condition of rain or on a damaged glass or with cracks on it.

When the product is working high above the ground at outside, it's necessary to set ground safety warnings which can avoid personal injuries caused by accident.

CLEANING.

When there is no dust or sand on the glass, spray the glass directly, but do not make the mop or the glass all wet. Fill water in the sprayer and add some cleaning product.

If there is dust or sand on the glass before starting using this robot, clean it with a dry cloth. Otherwise, the mops could mix the cleaning product moisture with the dirt and scratch or damage the glass.

GETTING STARTED.

Ensure the power line and plug are completely connected. Long press the power/start button to turn on the robot and the fan will be activated. After the fan is running, attach the robot to the glass far away from the window frame. Short press the power/start button to start running the robot.

TAKING DOWN THE ROBOT.

When the robot is running, hold the safety rope with one hand, and take down the robot with the other hand. If your hand can't reach the robot, please use the remote control or safety rope and pull it back. Pull the robot from one side which is as close to the glass as possible, prevent it from dropping out.

After completely taking down the robot, long-press the power button (more than 3 seconds) to stop it.

POWER-OFF PROTECTION.

This robot is equipped with an internal battery, which can hold on the robot for twenty minutes in case the robot is accidentally removed from the power cord and it will raise an audible and visual alarm.

Please take down the robot as soon as possible.

When the internal battery is too low, the robot cannot turn on. Please connect it to the power outlet to charge the robot. The indicator will be on in red while charging and once it turns off it means that the robot can start working again.